

# Mural Installation Guide

HEAVY-GRADE, PASTE-THE-WALL WALLCOVERINGS

DAMI & EM DESIGN  
Modern Heritage

## Important Before You Begin



We recommend installation by two people.



Ensure the wall is clean, smooth, dry and evenly prepared.




Use a high-quality, ready-mixed adhesive. **Paste the wall, not the mural.**



Allow your mural to acclimatise in the room for at least 48 hours.

## Example Mural Layout

This example shows a mural measuring 420 cm wide × 300 cm high, consisting of six panels, each 70 cm wide, supplied across two rolls.

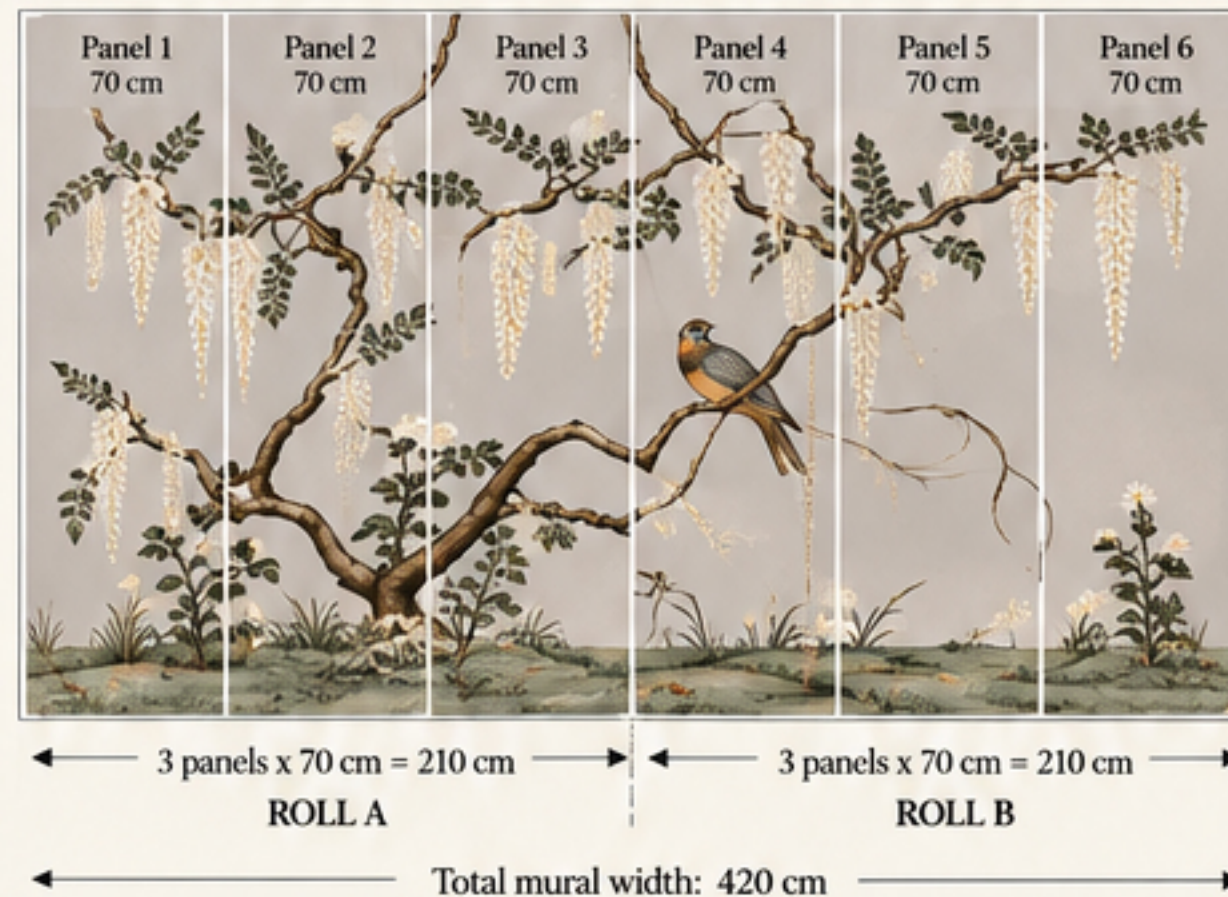

|              |           |
|--------------|-----------|
| Total width: | 420 cm    |
| Height:      | 300 cm    |
| Panels:      | 6         |
| Panel width: | 70 cm     |
| Rolls:       | 2 (A + B) |

**Roll A:** Panels 1–3

**Roll B:** Panels 4–6

300 cm

The image shows how the complete artwork is divided into individual panels and how the panels come together to create the finished mural.

Your mural may have different dimensions, panel widths or number of rolls. Always follow the individual Mural Layout supplied with your order and the numbers printed on each panel.

### 1 Lay out your mural



- Unroll all panels and arrange them in numerical order.
- Check the complete artwork before installation.
- Do not cut or trim the panel edges.

### 2 Establish a perfect vertical



- Start from the left-hand side of the wall with Panel 1.
- Use a spirit level, plumb line or laser level to create a perfectly straight vertical reference.
- Do not use the ceiling, skirting board or corner of the room as your guide.

### 3 Paste the wall



- Apply a thin, even layer of ready-mixed adhesive using a roller or brush.
- Paste slightly beyond the width of the panel.
- Avoid using too much adhesive.
- Paste the wall, not the mural.

### 4 Install Panel 1



- Position Panel 1 against your vertical reference.
- Align at the top and allow it to fall naturally.
- Gently smooth from the centre outwards.
- Allow extra material at the top and bottom.

### 5 Install Panel 2



- Paste the next section of wall.
- Position Panel 2 directly beside Panel 1.
- Match the artwork and bring the edges together.
- **Do not overlap the panels.**
- The edges should meet neatly with no visible gap.

### 6 Continue with all panels



- Continue installing the remaining panels in numerical order.
- Check the design aligns with the previous drop.
- Join each panel edge to edge.
- Do not stretch or pull the material.
- Wipe away any excess adhesive with a clean, damp cloth.

### 7 Trim the outer edges



- Once all panels are installed and you are happy with the alignment, trim the excess material around the outer perimeter.
- Use a sharp knife and a straight edge.
- Trim at the ceiling, skirting board, left wall edge and right wall edge.
- **Do not trim the joins between panels.**

### 8 Finished result



- A beautifully fitted mural with clean edges, following the exact dimensions of your wall.
- Allow to dry naturally for 12–24 hours, avoiding sudden temperature changes.
- Maintain a stable room temperature and humidity.



## Remember

- Your mural is supplied in professionally trimmed, ready-to-hang panels.
- Do not trim or overlap the joins between panels.
- Measure the maximum wall width and height, then add 2.5 cm to each outer side.
- Follow the panel numbers.
- Trim only the outer perimeter once installation is complete.
- Always prioritise the straight alignment and pattern match of the panels.



## Download the Full Guide

Click the button below to download a printable version of this installation guide.

DOWNLOAD GUIDE